



Panasonic SDR H-100 Upper Cover Replacement

This is the first prerequisite for to get to the other parts of the device that commonly break and need to be replaced.

Written By: Caleb Osborne





TOOLS:

- [Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Upper Cover




- Unscrew the four (three black, one silver) 4 mm screws on the bottom of the camcorder.

Step 2



- Unscrew the three 6 mm screws on the right side of the camcorder.

Step 3

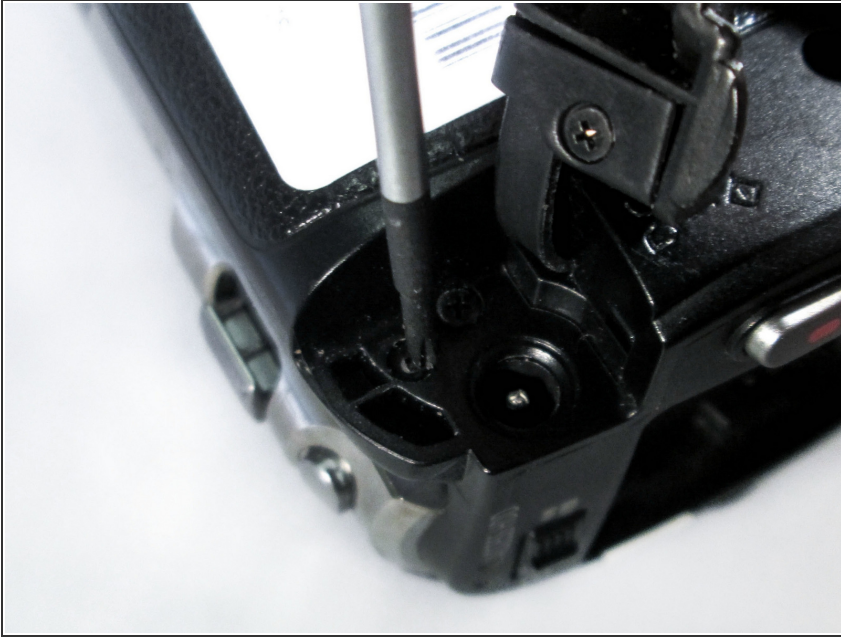

- Pull back the charging port cover and remove the 4 mm screw on the camera

Step 4




- Unscrew the two black 4 mm screws on the left side of the camcorder under the LCD (One close to the hinge and one close to the back, upper corner of the camcorder).

Step 5



- Pull the casing under the hand strap directly outward and gently so the ribbon cable is not damaged.

Step 6

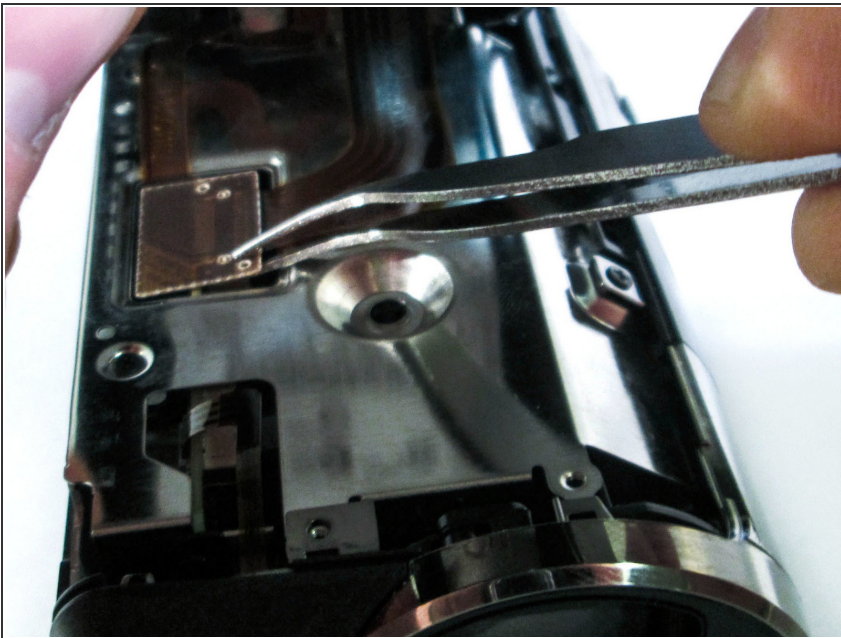

- Grab the ribbon cable at the connection point with tweezers and slowly lift up until the connection is separated, this connects the HDD to the motherboard.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-09-28 09:16:50 AM.